





























Sealing the wooden frame

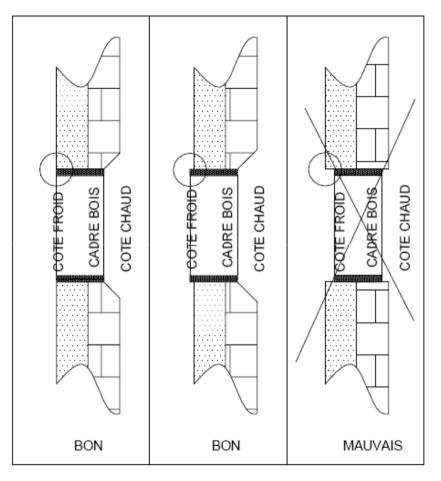

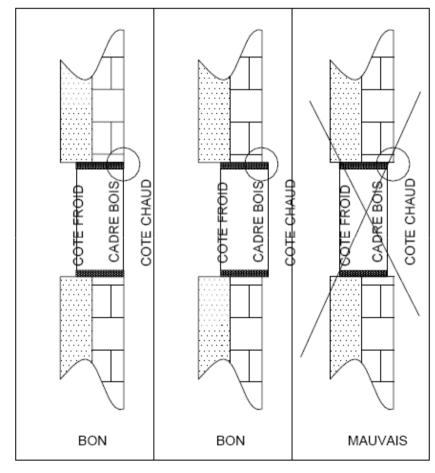


WINEC25

WINEC50S






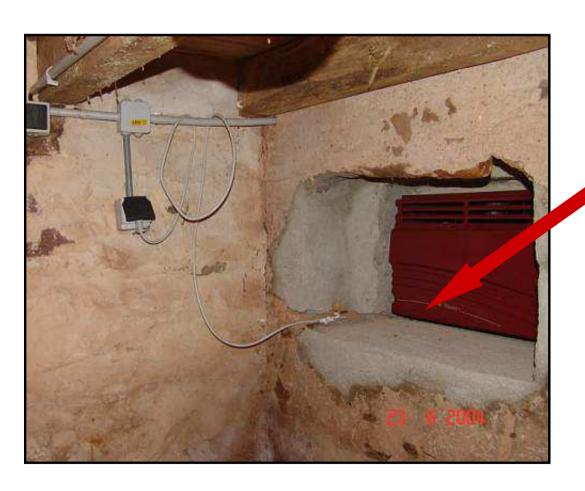

No air inlet





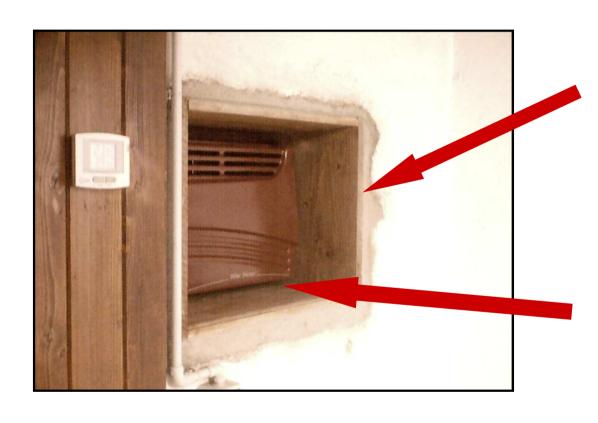

No extension of the wooden frame

No air inlet







Attention to the proximity of the wall from the evacuation room!




AIR DUCTS







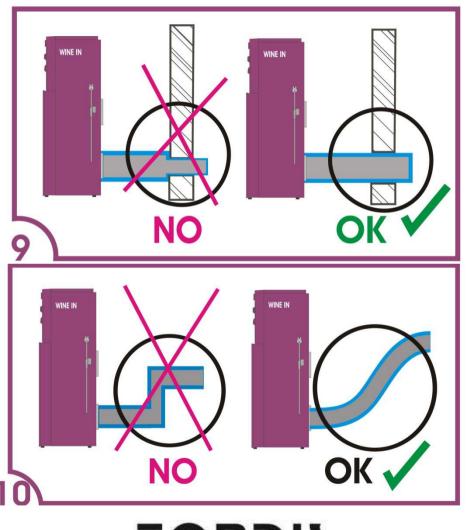







The pipes length should be as short as possible







Attention to elbows




Something more...

✓ If necessary, use stiff elbows




Don't use round grids (reduces approx 50% of air inlet

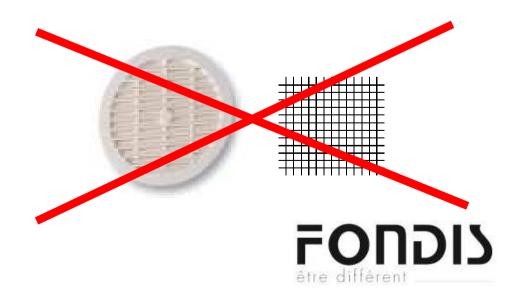





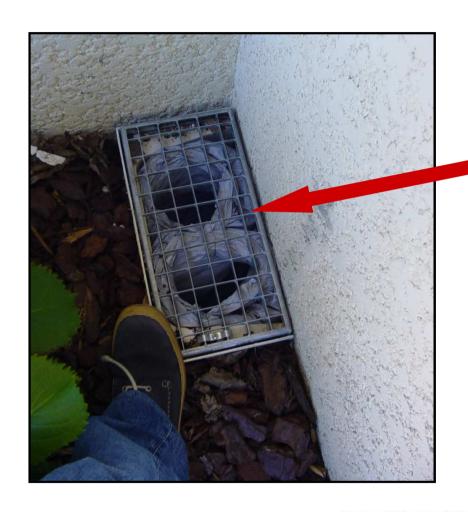

Minimal space between the pipes outlets is not respected!
































Maintenance

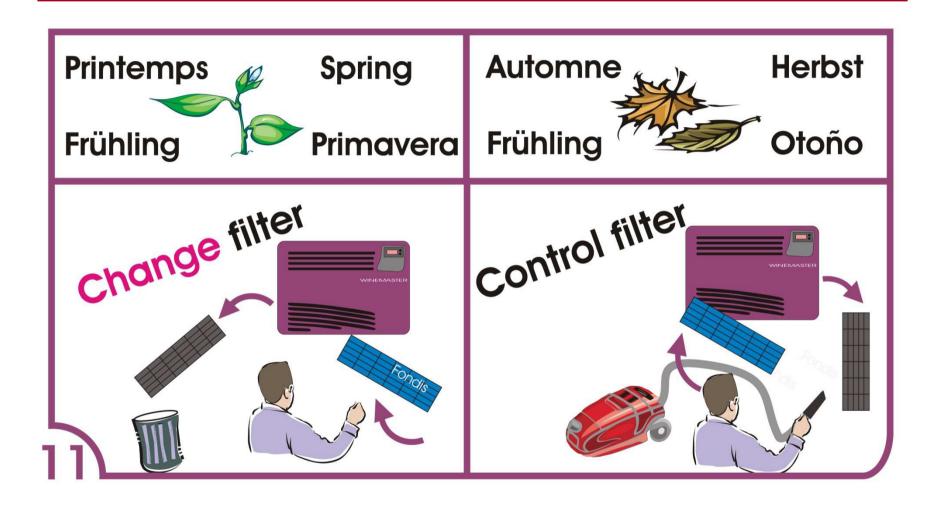





Maintenance




Verify that the filter is not dusty!






Maintenance

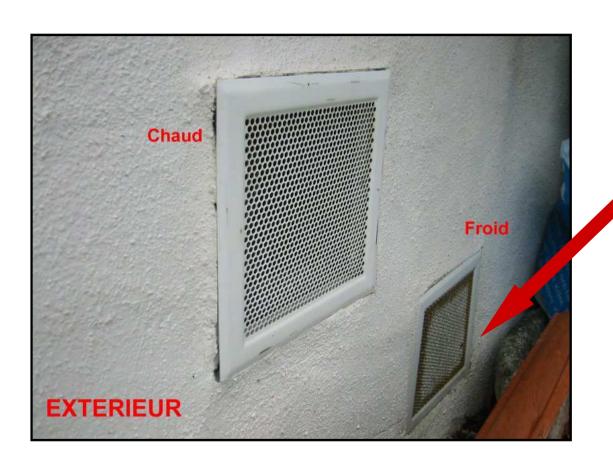


Verify that the grids are not dusty







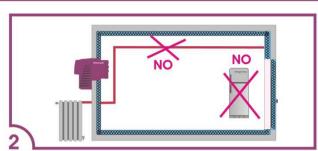





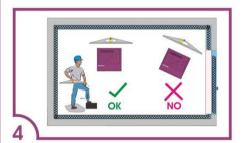


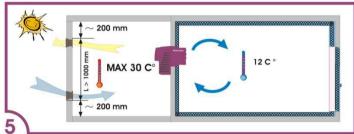


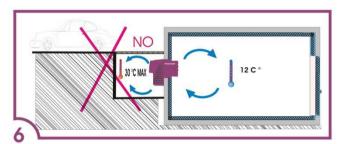


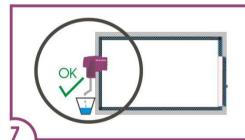


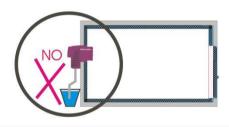


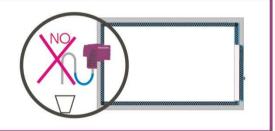

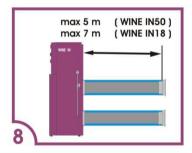

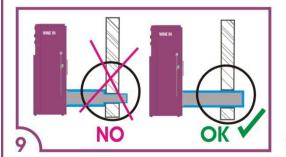

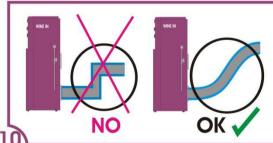

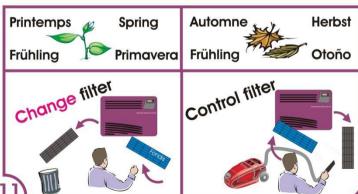

** Time Master* by FONDIS